



Senstar Symphony
8.x
Command Line Installation Guide

Contents

Overview.....	3
Configuration file.....	4
Configuration file example.....	4
Configuration file parameters.....	4
Command line installation.....	6
Command line update.....	7
Legal information.....	8



Overview

The Senstar Symphony installer includes functionality for installations and upgrades using the command line. To perform a command-line installation or upgrade, you must have administrative rights.

The installer can perform both silent and passive installations from the command line.

The process for a command line installation or upgrade is:

1. Download the installer.
2. If necessary, create or update a configuration file.
3. Run the installer from the command line.



Configuration file

The configuration file contains information that the installer uses to install or update the Senstar Symphony software.

The configuration file is an `.xml` file that you can create or edit using any text editor. You can use the example or an existing configuration file as a template for new configuration files.

For a new installation, you must include a configuration file and you must define all of the parameters in the configuration file.

For an update, you only need to include a configuration file if you want to change the configuration of the Senstar Symphony Server server. In this case, you only need to include the parameters that you are changing. If you do not include a configuration file or you omit sections from the configuration file, the installer uses the values of the server from which you are updating.

Configuration file example

```
<?xml version="1.0" encoding="utf-8" ?>
<Configuration xmlns="http://tempuri.org/Seer/Configuration.xsd">
  <Database>
    <Connection server_name="%localhost%\senstar" database="aira" use_integrated_security="false"
    username="sa" password="Pass!Word123" />
  </Database>
  <License>
    <online>
      <Farm name="[farmname]" />
      <XNetCredentials username="username" password="password" />
    <Allocations>
      <Allocation type="standard" quantity="0" />
      <Allocation type="professional" quantity="0" />
      <Allocation type="enterprise" quantity="1" />
    </Allocations>
  </online>
  <!--<offline>
    <File name="C:\temp\license_00000_[xxx]_2011-10-6_2730.lic" />
  </offline> -->
  </License>
  <Security>
    <AuthenticationMode>Seer</AuthenticationMode>
    <Credentials>
      <Administrator username="username" password="password" />
    </Credentials>
  </Security>
  <Paths>
    <Data>C:\symphony\data\</Data>
    <Log level="4">C:\symphony\logs\</Log>
  </Paths>
  <Networking>
    <AllowPortRangeModification>false</AllowPortRangeModification>
  </Networking>
</Configuration>
```

Configuration file parameters

Parameter	Description
Database connection	<pre><Connection server_name="server_name" database="database_name" use_integrated_security="true_false" username="username" password="password" /></pre> <p>This parameter includes the information that the Senstar Symphony Server server uses to connect to the Senstar Symphony Database.</p>

Parameter	Description
Farm name	<pre><Farm name="<i>farm_name</i>" /></pre> <p>This parameter specifies the name of the farm to which the Senstar Symphony Server will belong. The farm name is registered with the Senstar Xnet, so it must be unique. The farm name can contain environmental variables.</p>
Senstar Xnet credentials	<pre><XNetCredentials username="<i>user_name</i>" password="<i>password</i>" /></pre> <p>This parameter includes your organizations credentials for the Senstar Xnet. The Senstar Xnet uses these credentials to retrieve license information.</p>
Allocations	<pre><Allocation type="<i>license_type</i>" quantity="<i>license_quantity</i>" /></pre> <p>This parameter defines the licenses that you want to allocate to the Senstar Xnet. The license quantity is the total and not the number of license to add to the Senstar Symphony Server.</p>
File	<pre><File name="<i>file_path</i>" /></pre> <p>This parameter specifies the license file if the Senstar Symphony Server is not connected to the Internet.</p>
Authentication mode	<pre><AuthenticationMode><i>mode</i></AuthenticationMode></pre> <p>This parameter defines the authentication mode that the Senstar Symphony Server uses to authenticate users.</p>
Credentials	<pre><Administrator username="<i>user_name</i>" password="<i>password</i>" /></pre> <p>This parameter specifies the user name and password for the server administrator.</p>
Data	<pre><Data><i>data_path</i></Data></pre> <p>This parameter specifies the folder that the Senstar Symphony Server uses to store images, video, etc.</p>
Log	<pre><Log level="<i>log_level</i>"><i>log_path</i></Log></pre> <p>This parameter defines the log level and the location of the log files. The log level can be 1 to 4, where 1 is a low log level and 4 is a diagnostic log level.</p>
Allow port range modification	<pre><AllowPortRangeModification><i>true_false</i></AllowPortRangeModification></pre> <p>This parameter defines whether to allow administrators to modify port numbers.</p>



Command line installation

`installer_name.exe [option] [database] [installation folder] [configuration file]`

Option

Parameter	Description
passive	<code>Setup.exe /passive</code> This parameter defines the installation as a passive installation.
quiet	<code>Setup.exe /quiet</code> This parameter defines the installation as a silent installation.

Database

Parameter	Description
InstallDB	<code>Setup.exe InstallDB=1</code> This parameter determines whether to install the database.
SAPWD	<code>Setup.exe InstallDB=1 SAPWD=password</code> This parameter specifies the system administrator password for the database server.
SKIPSQL	<code>Setup.exe SKIPSQL=1</code> This parameter determines whether to skip SQL checks. Use this parameter if you have a Microsoft SQL 2008 database that you do not want to update.

Installation folder

Parameter	Description
InstallFolder	<code>Setup.exe InstallFolder="<i>installation_path</i>"</code> This parameter defines the installation location for the software.

Configuration file

Parameter	Description
SetupConfigFile	<code>Setup.exe SetupConfigFile="<i>file_path</i>"</code> This parameter specifies the location of configuration file.



Command line update

installer_name.exe [database] [configuration file]

Database

Parameter	Description
SKIPSQL	Setup.exe SKIPSQL=1 This parameter determines whether to skip SQL checks. Use this parameter if you have a Microsoft SQL 2008 database that you do not want to update.

Configuration file

Parameter	Description
SetupConfigFile	Setup.exe SetupConfigFile=" <i>file_path</i> " This parameter specifies the location of configuration file.



Legal information

Copyright © 2021 Senstar Corporation and/or its Licenser(s). All rights reserved.

This material is for informational purposes only. Senstar makes no warranties, express, implied or statutory, as to the information in this document.

Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Senstar Corporation

Senstar may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Senstar, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

Senstar and the Senstar logo are registered trademarks of Senstar Corporation.

All other trademarks are the property of their respective owners.

